

If you need more information about this product or any other JUGS product or service, please contact JUGS Sports:

In the USA and Canada, call toll-free: 1-800-547-6843.

For International Orders, call collect: 0-503-692-1635.

Our fax number is 1-503-691-1100.

Visit our NEW website at jugssports.com.



JUGS Sports

11885 SW Herman Road • Tualatin, Oregon 97062

Se habla español.

⚠ WARNING READ THIS NOW

When this screen is being handled it can suddenly and unexpectedly open to full size. BEFORE REMOVING SCREEN FROM CARRYING BAG, BE SURE TO READ AND UNDERSTAND THESE INSTRUCTIONS FOR UNFOLDING AND FOLDING THE SCREEN. You must be at least EIGHTEEN YEARS OF AGE and in good health to unfold and fold this screen. Before removing the screen from the carrying bag or retention strap, be sure you have an area of at least 20 feet clear all around you. Do not attempt to unfold or set up on sloping ground. Failure to heed this warning could result in SERIOUS INJURY.

 
 
 
SAVE THESE INSTRUCTIONS

©2014 JUGS Sports • ISI-05-2014




Instant Screen®

TERMINOLOGY:

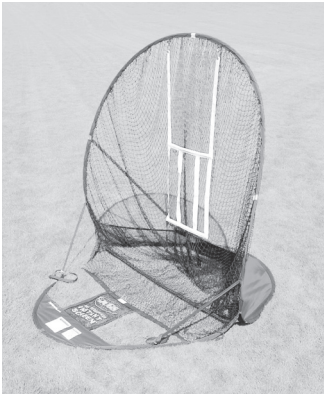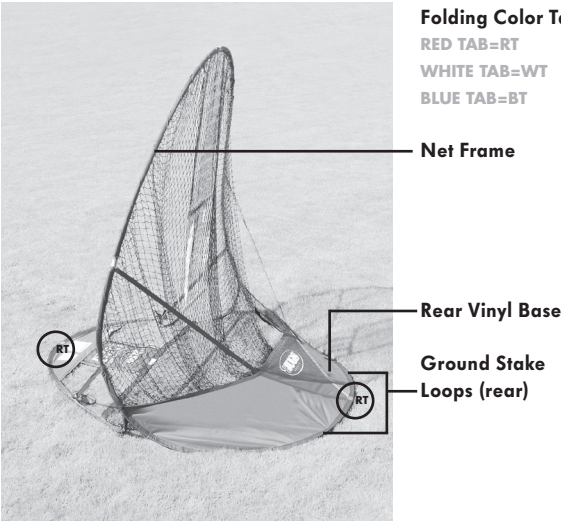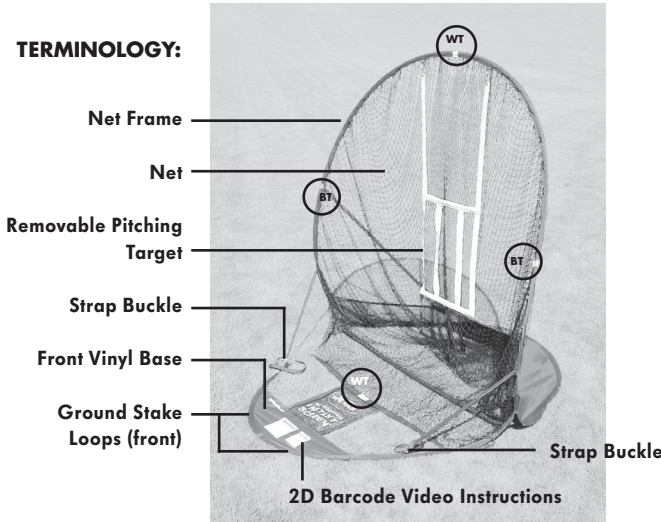

Screen and Removable Pitching Target

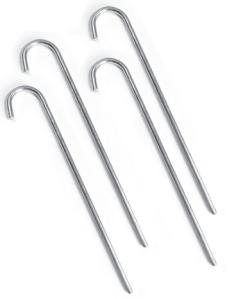 

Ground Stakes

 


Elastic Retention Strap




Vinyl Cover: includes exterior velcro pouch for holding ground stakes and Instructions and an interior "kangaroo" velcro pouch for holding rolled up pitching target.


UNFOLDING the Instant Screen®

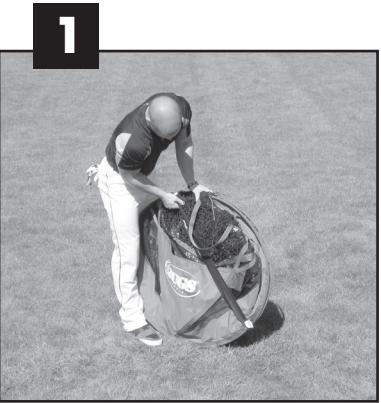

 1. Grasping the edge of the Net Frame, remove screen from carrying bag and remove the Elastic Retention Strap.

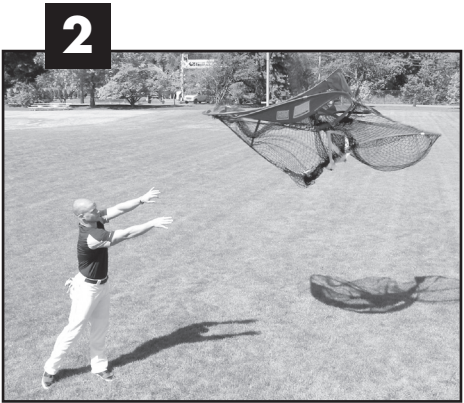

 2. Holding the Net Frame together, toss away from your body onto a clear, level area.

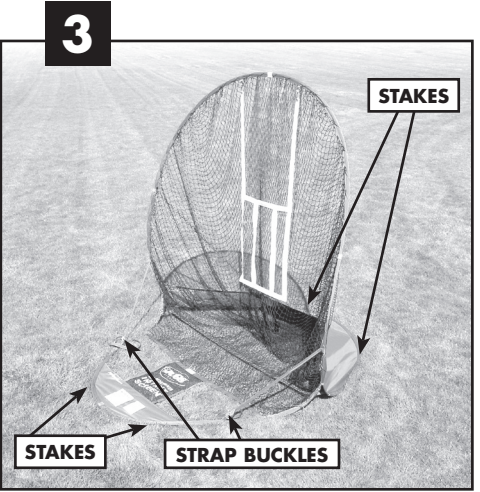

3. Tilt screen into upright position and adjust straps. Insert the Ground Stakes into the Ground Stake loops if needed.

 
⚠ WARNING

Always inspect your Instant Screen® before each use. Do not use the Instant Screen® if it shows signs of excessive wear or damaged components.


FOLDING: As simple as RED, WHITE and BLUE.



To view your free video drills or if you're having trouble folding your screen, use a mobile device to scan the 2D barcode located to the left or the one located on your JUGS Instant Screen (located below the logo on the front vinyl base.) Video drills and Instructions can also be viewed online at: [instantcrendrills.com](https://www.instantcrendrills.com)

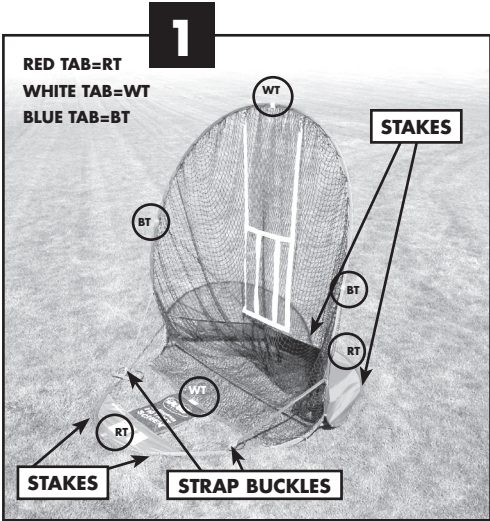

 
1. Loosen the strap buckles and remove all Ground Stakes and Pitching Target (if necessary).

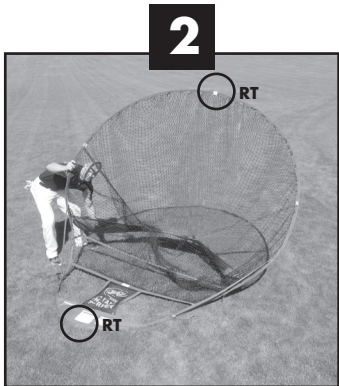


2. Tip your Instant Screen® over backwards.



 
3. Put the two vinyl bases together—the JUGS logo on top and the RED TABS approximately on top of each other.

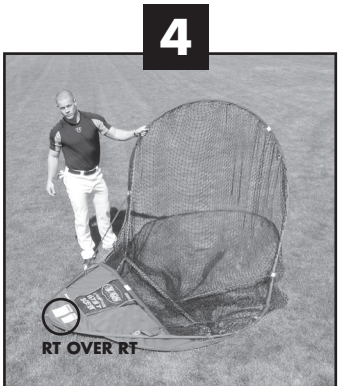

 4. Grasping the side of the Net Frame, walk around to the JUGS logo on the front vinyl base.

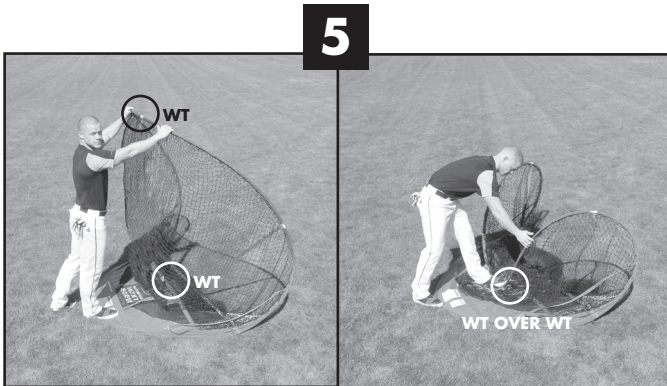

 5. With hands on either side of the WHITE TAB at top of Net Frame, push the top of the Net Frame down to the WHITE TAB located just above the JUGS logo.

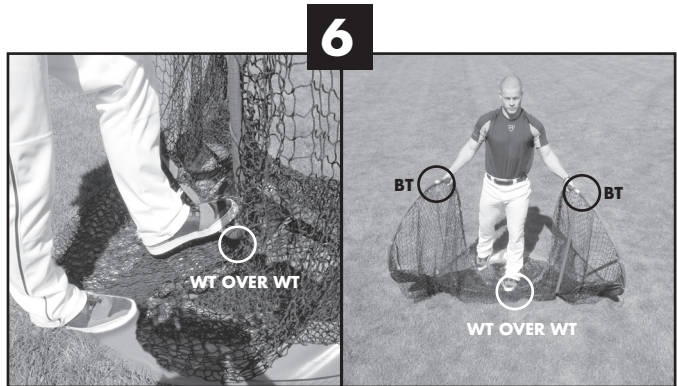


6. Place your foot on the top of the Net Frame to hold in this position and locate and place hands over and grasp BLUE TABS located on the left and right sides of Net Frame.


⚠ WARNING READ THIS NOW

When this screen is being handled it can suddenly and unexpectedly open to full size. **BEFORE REMOVING SCREEN FROM CARRYING BAG, BE SURE TO READ AND UNDERSTAND THESE INSTRUCTIONS FOR UNFOLDING AND FOLDING THE SCREEN.** You must be at least **EIGHTEEN YEARS OF AGE** and in good health to unfold and fold this screen. Before removing the screen from the carrying bag or retention strap, be sure you have an area of at least 20 feet clear all around you. Do not attempt to unfold or set up on sloping ground. Failure to heed this warning could result in **SERIOUS INJURY**.

 SAVE THESE INSTRUCTIONS

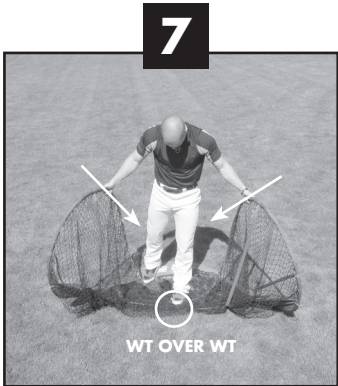

 
7. Keeping your foot on top of the Net Frame, **simultaneously** begin moving the BLUE TABS down towards the logo on base.

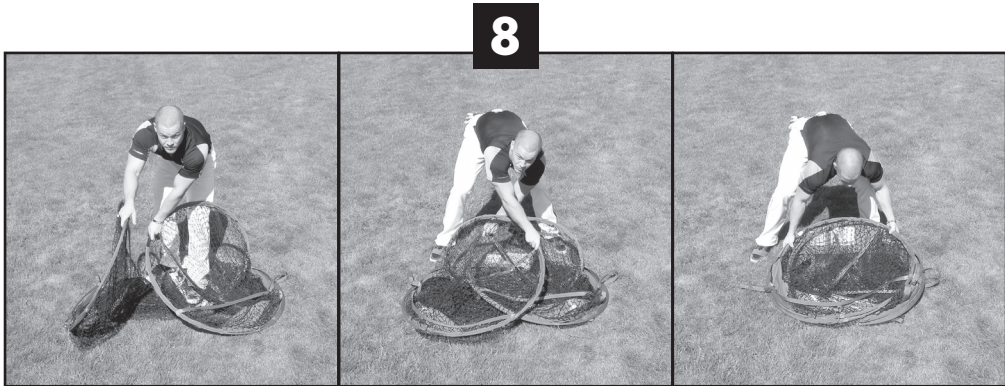

8. Push the right side BLUE TAB down towards the JUGS logo forming a 36"-diameter circle and push the left side down towards the JUGS logo forming another 36"-diameter circle. RED TABS should now be on top of each other at this point.



 9. Keeping control of the collapsed Net Frame "circles" (if you release too early the screen can pop open), put on the retention strap.

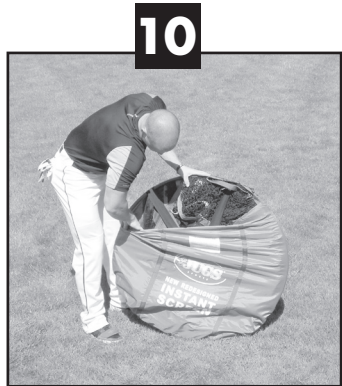

10. Place your folded and strapped screen into the carrying bag.

⚠ WARNING Always remember to place the ELASTIC RETENTION STRAP onto the folded screen. Always transport the screen folded and STRAPPED in its CARRYING BAG.