


8 FOOTER™ PARTS LIST

1. (2) Side Pole Assemblies—
(3) “tent” poles per side—
bottom, center and top.
2. Leg-Base Assembly—
(2) legs with Leg-Base Risers, (2) end
sections and (1) center section.
3. (1) 8' x 8' Sock-Net™ Netting
4. Nylon Travel Bag

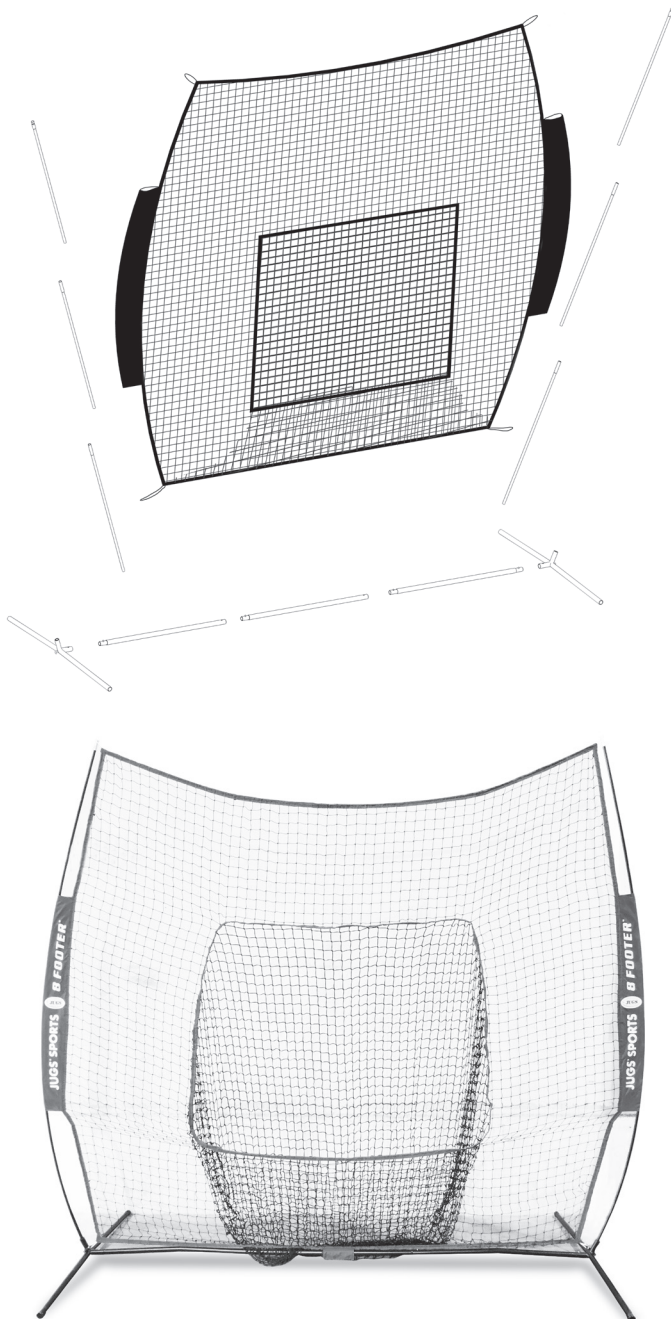

8 FOOTER™

ASSEMBLY INSTRUCTIONS


1. Assemble the Leg-Base Assembly by joining parts as shown. All parts are joined with snap buttons—depress button, insert and engage button with hole.

2. Next, attach the bottom of the Sock-Net™ Netting by stretching the loop at one corner of the bottom of the Sock-Net™



Netting underneath and then over the hook on the outside of the Leg Base Riser. Repeat this process for the other side

3. Assemble the first Side Pole Assembly by joining fiberglass “tent” poles as shown and inserting the bottom end through the pocket on the side of the Sock-Net™ Netting and inserting it into one of the Leg-Base Risers. Repeat this process for the other side of the screen.

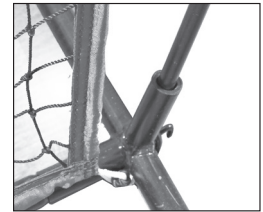

4. Finish by pulling the top of a Side Pole Assembly down slightly toward the center of screen and attaching the upper corner of the Sock-Net™ Netting to it by placing the



loop around the metal fitting at the top of the pole and releasing pole to upright position. Repeat for the other side of screen.

JUGS SPORTS

11885 SW Herman Road

Tualatin, OR 97062

1-800-547-6843 • jugssports.com