

 


FIXED-FRAME™ Short-Toss® Protective Screen


Assembly Instructions

Step 1

Lay parts on the ground, as in this drawing. Frame sections are labeled as shown here.

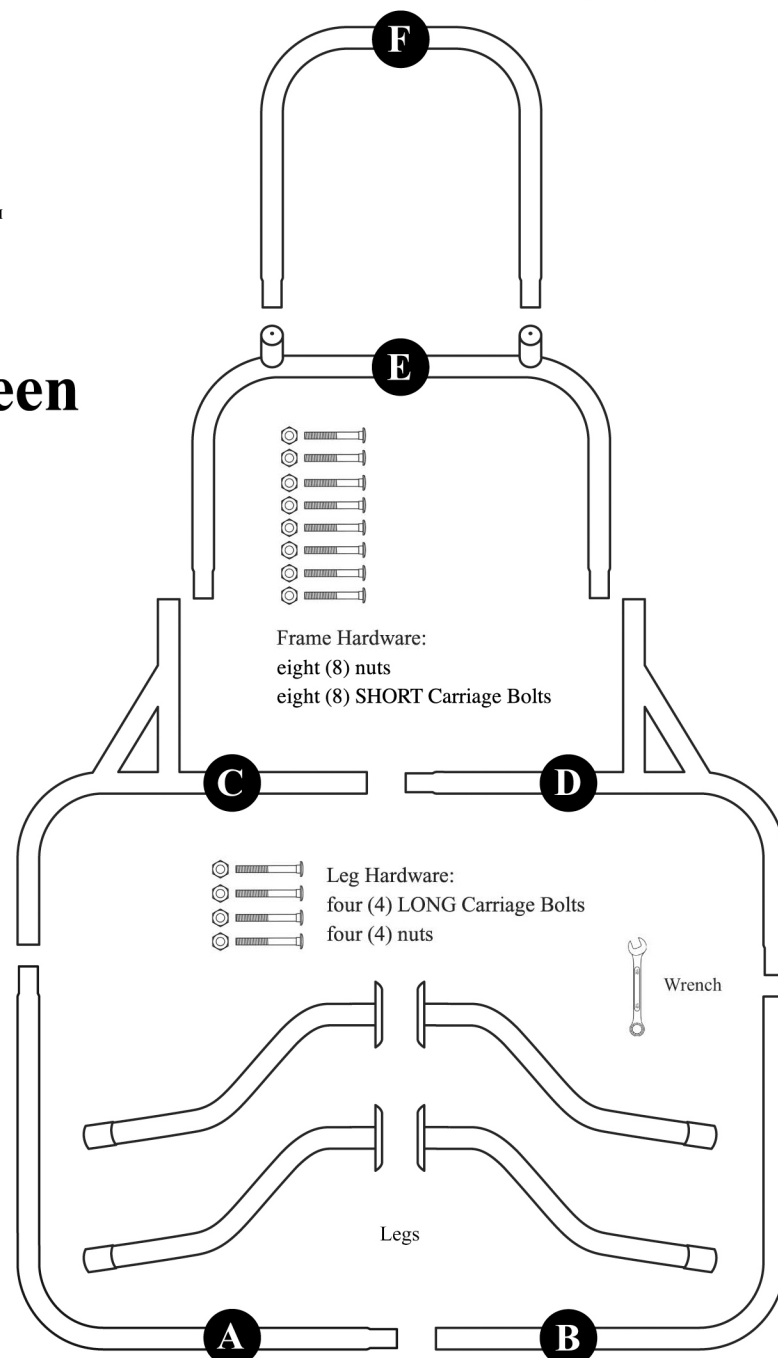


 Step 3

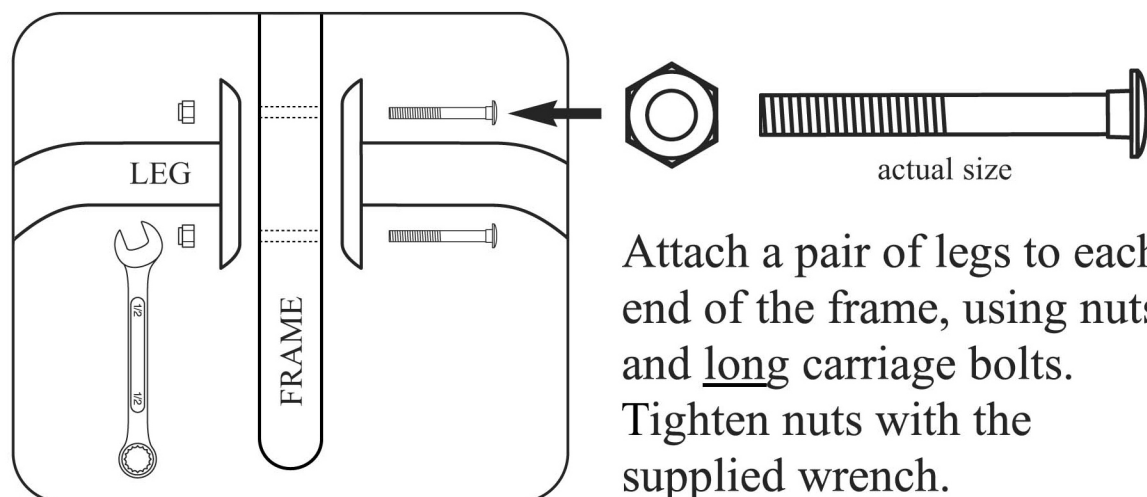

Attach a pair of legs to each end of the frame, using nuts, and long carriage bolts. Tighten nuts with the supplied wrench.

 Step 2

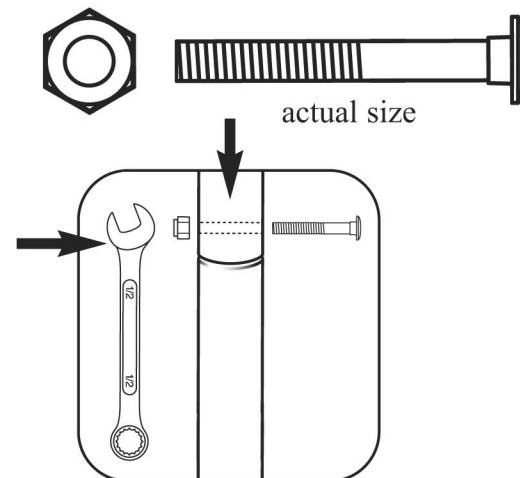

Join the frame sections. Fasten together, using nuts, and short carriage bolts. Tighten nuts with the supplied wrench.

IMPORTANT NOTE:

 
To eliminate net snagging always install nuts on the inside of the frame.

NEW FOREVER-TIGHT™ CARRIAGE BOLTS

With Forever-Tight™ Carriage Bolts your Fixed-Frame™ Protective Screens will not come apart during practice or transport.




Step 4

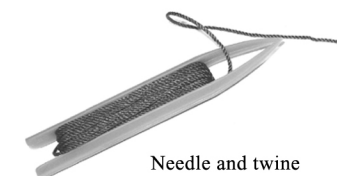

Carefully tilt the frame and lay it on the ground. Stretch netting out, on the ground, in the same shape as the frame. Place the open end of the netting so it touches the top of the frame.

 Stand in the center of the frame and begin feeding the netting onto the frame, like a pillowcase, alternating sides as you go. Fasten the netting to the frame at the bottom with the needle and twine. Follow the steps below to ensure proper installation.

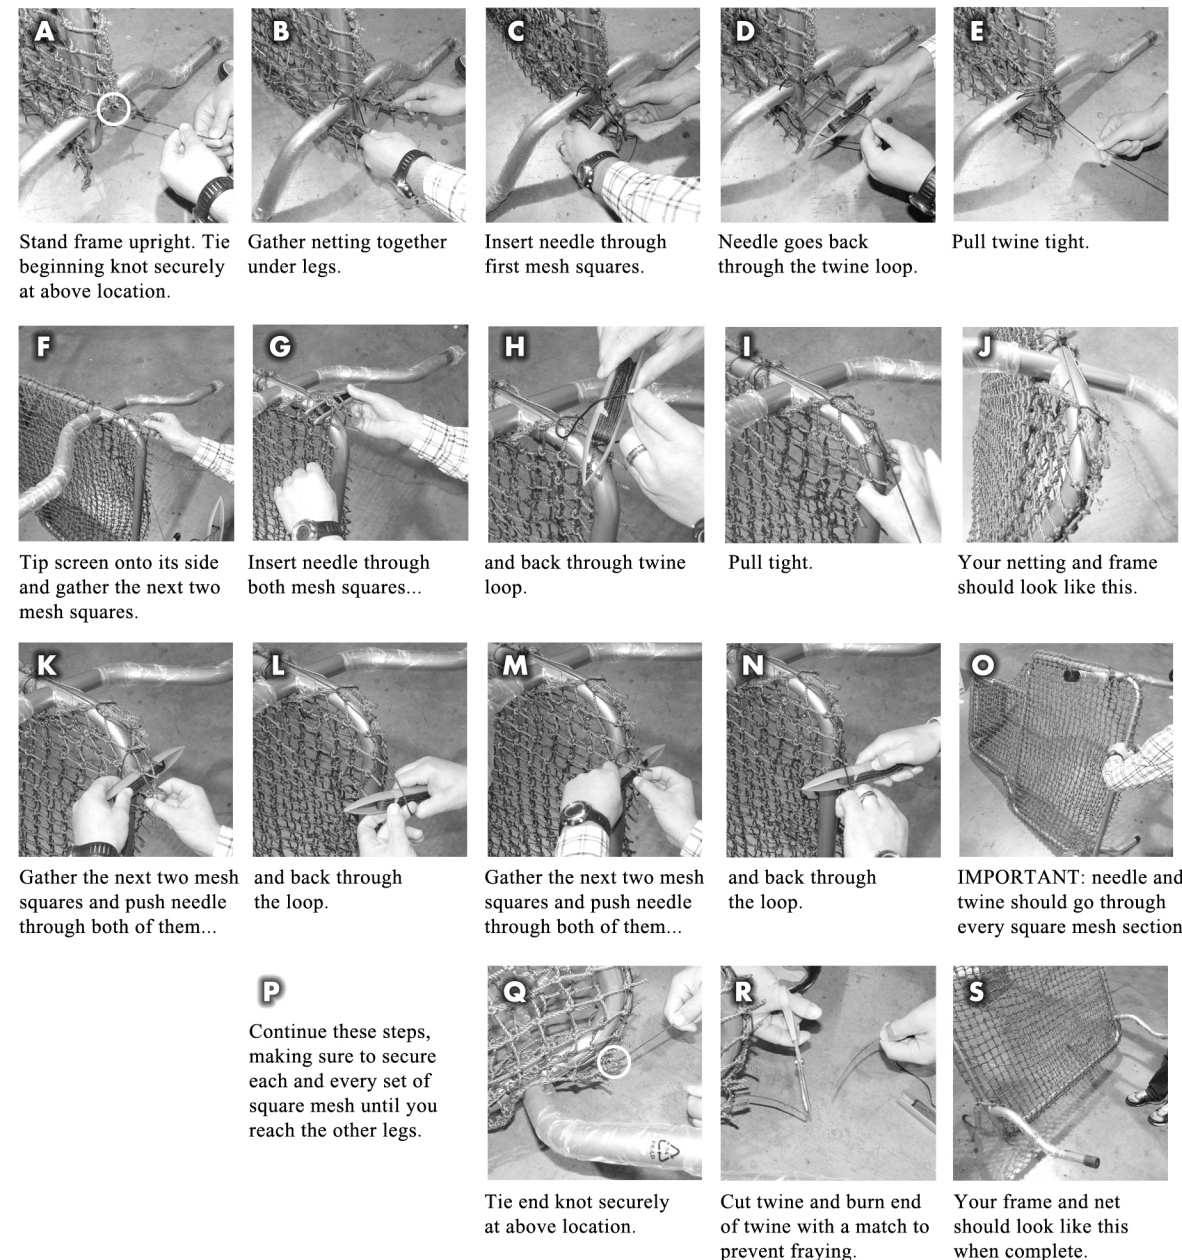

JUGS Sports guarantees JUGS Fixed-Frame™ Protective Screen netting for one (1) year against defects in material or workmanship. JUGS Fixed-Frame™ Protective Screen frames are guaranteed for one (1) year unless damaged by snow, ice or other acts of God. Commercial use of JUGS Fixed-Frame™ Protective Screens automatically limits this warranty to thirty (30) days after shipment.

If you have any questions regarding this screen, contact the manufacturer. USA or Canada, call toll free: 1-800-547-6843. International orders, call collect: 0-503-692-1635. Our fax number is 503-691-1100. Or visit our website at www.jugssports.com.