





STANDARD C-SHAPED SOFTBALL SCREEN (S1012)

ASSEMBLY INSTRUCTIONS

1. Assemble frame as shown below using carriage bolts and nuts (see **Frame Assembly Example** below). Note that the legs should touch the ground at the tip of the legs if installed correctly (see **Leg Assembly Example** below.)
2. Stretch netting out, on the ground, in the same shape as the frame. Stand at the center of the frame and begin feeding the net onto the frame, like a pillowcase, alternating sides as you go until the netting reaches the bottom of the frame. Once net is installed over frame, pull (2) drawstrings tight and around leg piping and tie to secure net at bottom.

3. Attach velcro tabs around the C-shaped cutout to finish securing the net to the frame.

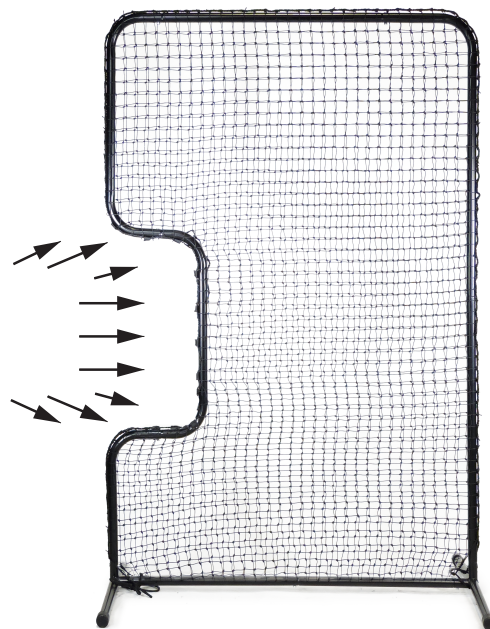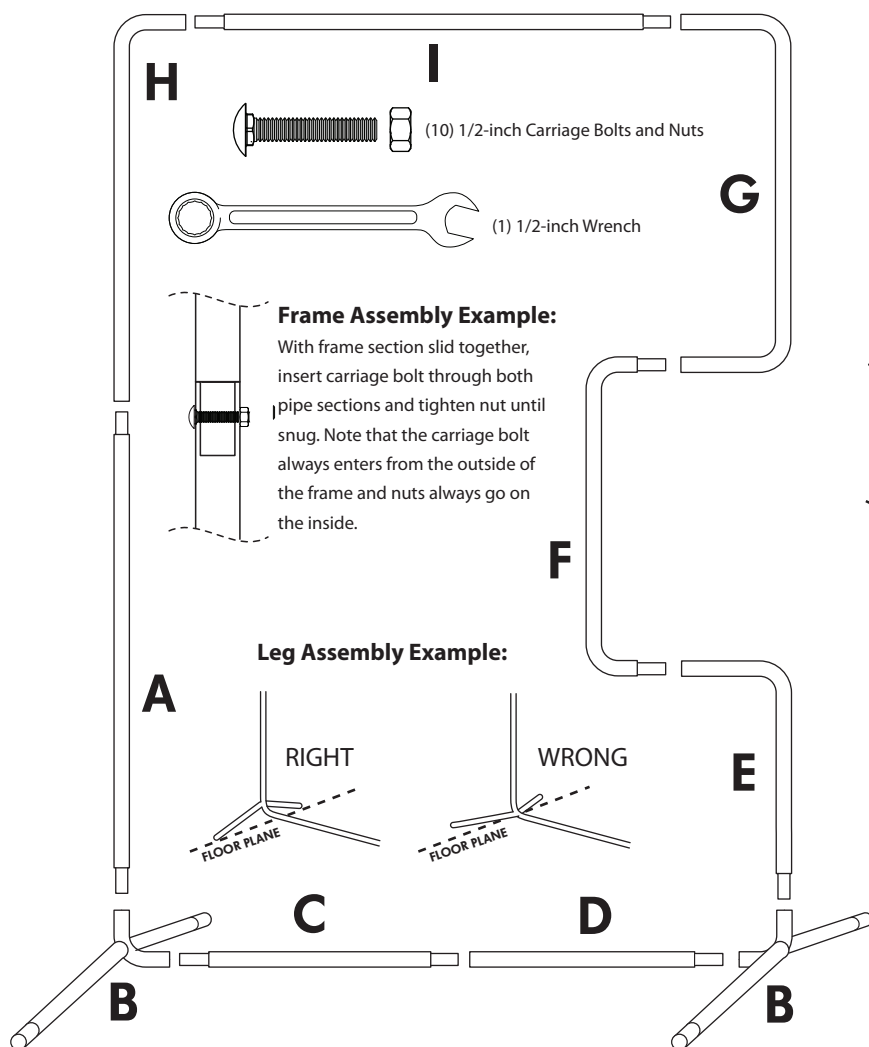

• JUGS Sports guarantees JUGS Standard netting and frame for (1) year unless damaged by snow, ice or other acts of God.

If you have any questions regarding this screen, contact JUGS Sports. USA and Canada, call toll free: 1-800-547-6843.

International orders, call collect: 0-503-692-1635. Our fax number is 503-691-1100. Or, visit our website at jugssports.com