

PROTECTOR™ SERIES

SHORT-TOSS® SCREEN ASSEMBLY INSTRUCTIONS



G

PADDING

6

Snap

Button


D

Snap

Button

F

A

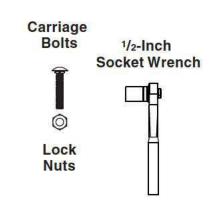

Corner padding

comes attached

from the factory.

E

7

Snap Button

4

FRAME TUBING

IMPORTANT: Carriage bolts

0)


B

Overhead Assembly Side View

should enter frame tubing

from the outside, with lock nut on the inside.




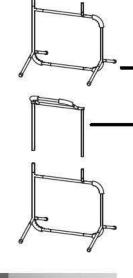



Padding reference numbers are located on the inside of the padding vinyl cover.

Overhead assembly can be adjusted for both right- or left-handed use by depressing the snap button and rotating top over to the other side. Snap button on other side should engage when in correct position.

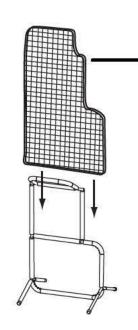

INVENTORY

- (22) Carriage Bolts
- (22) Lock Nuts
- (1) 1/2-Inch Socket Wrench
- (4) Legs
- (8) Frame Parts
- (15) Padded Sections
- (1) Short-Toss Netting

FRAME ASSEMBLY

Start by attaching 2 legs (B) to frame part E using carriage bolts and lock nuts. (Lock Nuts should be on underside of legs).

Next, attach 2 legs (B) to frame part
 A using carriage bolts and lock
 nuts. (Lock Nuts should be on
 underside of legs).

Note: all remaining carriage bolts should enter frame tubing from the outside, with lock nut on the inside.

Attach Parts C and D to this assembly. Finger tight nuts and bolts.

Join both sides together. Finger tight nuts and bolts.

Finally, join parts H, G and both F's together and attach to already assembled base. Finger tight nuts and bolts.

SECURELY tighten all Bolts using socket wrench.

PADDING

Using PADDING illustration, attach all padded sections to locations shown. Note: pad seams should all be on inside edge of frame.

NETTING



Stretch netting out, on the ground, in the same shape as the frame. Stand at the center of the frame and begin feeding the net onto the frame, like a pillowcase, alternating sides as you go. After the netting has been slipped over the frame, secure the netting around the bottom frame using the attached velcro strips.

Note: the side velcro strips attach below the legs (see photo above). Note: new netting must be pulled and stretched to fit frame correctly this is easier with two people.

