



The frame of your **JUGS** Quick-Snap® Protective Screen is now complete.

### Step 3: Netting

- A.** After completing the frame assembly, carefully tilt the frame forward and lay it on the ground.
- B.** Then, stretch the netting out across the ground, with the open end just touching the top of the frame.
- C.** Stand in the center of the frame and begin pulling the netting onto the tubing, alternating sides as you go.



- D.** Stand your screen back up. Your **JUGS** Quick-Snap® Screen is now complete.

If you need more information about this product or any other JUGS product or service, please contact the manufacturer:



In the USA and Canada, call toll-free: 1-800-547-6843.

For International Orders, call collect: 0-503-692-1635.

Our fax number is 1-503-691-1100.

Visit our website at [www.jugssports.com](http://www.jugssports.com).


Se habla español.

© 2008 JUGS Sports  
QSSSI-0808

## ASSEMBLY INSTRUCTIONS



### QUICK-SNAP®

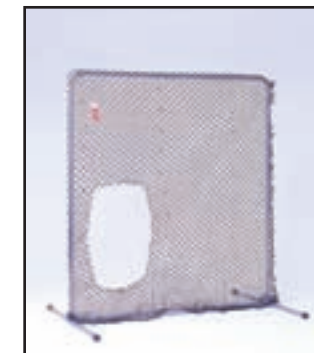

Softball Screen



Baseman Screen



Seven-Footer® Square Screen



Seven-Footer® Square Screen with Sock-Net™

**SAVE THESE INSTRUCTIONS**

**WARNING**

**- READ NOW -**  
This protective screen may not provide protection from batted or pitched balls which have rebounded or ricocheted off the pitching machine, this screen, or other structures.


**THE MACHINE OPERATOR, PITCHER, BATTER, OR FIELDER MUST REMAIN ALERT AT ALL TIMES.**

The machine operator must wear a batting helmet and eye protection while operating the machine. Failure to heed this warning may result in serious injury or death.

# JUGS Quick-Snap<sup>®</sup> Protective Screen

## Assembly Instructions

Take the frame sections and netting from your bag and separate them. Then follow these three easy steps.

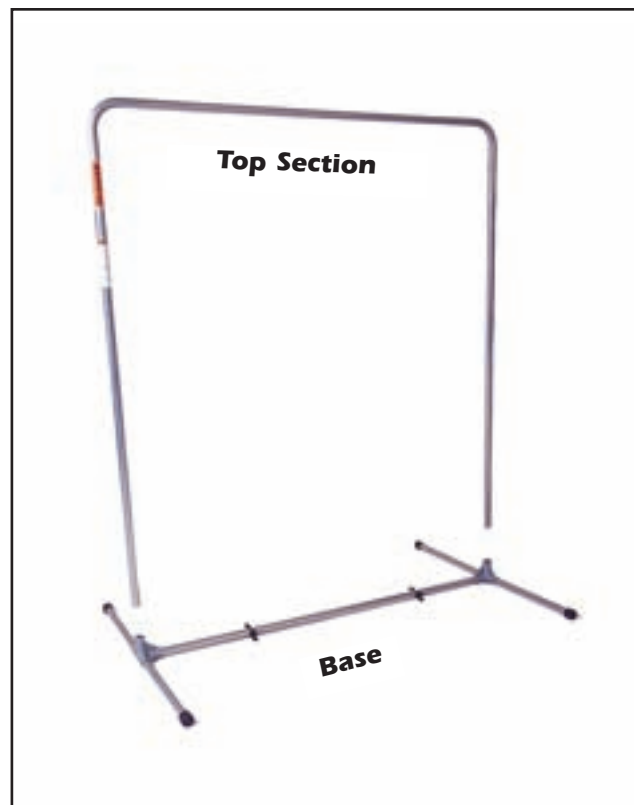

### Step 1: Base


**A.** Snap the two legs on one end of the base into its 4-way fitting.



**B.** Do the same with the two legs on the other end of the base.



**C.** Snap the two long parts of the base together, making sure the lock button is secure in the hole.

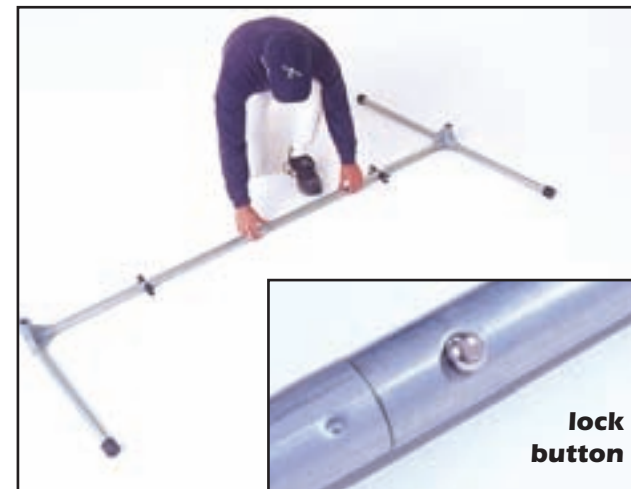

### Step 2: Top Section

**A.** Snap together the six pieces of the top section.



**B.** Connect the top section to the two 4-way fittings on the base, making sure the lock buttons are secure.

