



BATTING CAGE NET #5 OUTDOOR INSTALLATION INSTRUCTIONS

#42, #60 Polyethylene and #96 Polyester


1. Once you assemble them, the end sections will look like this. Insert a short hanging-loop assembly into each of three pre-drilled crossbar holes.

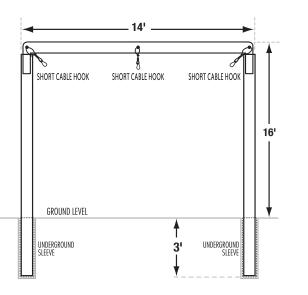


2. Once you assemble them, the three middle sections will look like this. On all three insert a short hanging-loop assembly into the middle pre-drilled crossbar hole and long hanging-loop assemblies into both outside pre-drilled crossbar holes.

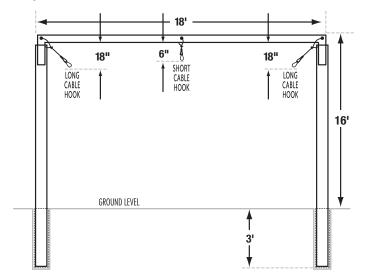


3. OVERHEAD VIEW OF WHERE TO DIG HOLES FOR THE GROUND SLEEVES. **IMPORTANT NOTE:** Use the larger four (2 7%") ground sleeves on two outside sections.

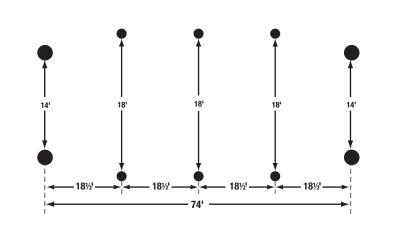

4. SIDE VIEW OF THE FIVE U-SHAPED SECTIONS COMPLETELY SET UP.

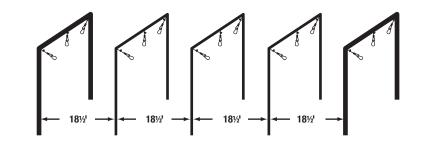

5. SIDE VIEW OF NET COMPLETELY SET UP

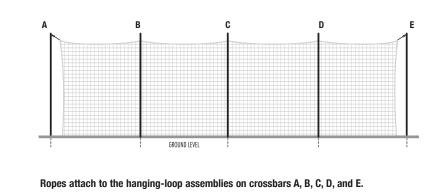

HOW TO SET UP YOUR JUGS OUTDOOR FRAME

1. Check contents to make sure you have all needed parts. Tubina

- Six 17%" x 19'-long galvanized tubing (three middle uprights)
- Four 23/8" x 19'-long galvanized tubing (two end uprights)
- · Six 23/8" x 3'-long galvanized tubing (ground sleeves for three middle uprights) • Four - 27/8" x 3'-long galvanized tubing (ground sleeves for two end uprights)
- Three 15%" x 18'-long galvanized tubing (three middle crossbars)
- Two 1⁷/₈"" x 14'-long galvanized tubing (two end crossbars)

Hanging-Loop Assemblies:

- · Fifteen hanging-loop assemblies (Six long hanging-loop assemblies and Nine short hanging-loop assemblies)
- 2. Dig holes and secure the 3' sleeves into the ground. Use concrete to secure your 3' sleeves into the around.
- 3. End Sections: Insert a short hanging-loop assembly into each of three pre-drilled crossbar holes and secure all with cable clamps.
- holes and long hanging-loop assemblies into the outside pre-drilled crossbar holes and secure all with cable clamps.
- 4. Slide the middle 18' crossbars into the uprights and fit into the sleeves.
- 5. Slide the end 14' crossbars into the uprights and fit into sleeves.

You are now ready to attach your netting to the frame HOW TO ATTACH YOUR JUGS NET TO THE FRAME

- assemblies
- 3. After hanging the net on the middle frame sections, making sure that it does not sag more than 1-2', pull the ropes towards the end frames to stretch it out. Attach each rope to the end frame sections with the corresponding hanging-loop assemblies. See Figure 1.
- 4. Walk completely around the net, pulling and helping the net to stretch into shape. The net will condense inside the box and will need a little help getting back into shape.

NOTE: We at JUGS recommend hanging your batting cage net with a minimum of 18" of netting on the ground. This will provide you with enough net and weight to prevent balls from slipping out underneath the sides and ends of the net.

NOTE: You should not stake the net down or put any type of weight on the net to hold it down. This would cause the net to prematurely wear out because the net would not be allowed to "give" and absorb the batted balls.

- HOW TO ATTACH YOUR HANGING LOOPS TO THE CROSSBARS
- hole with your other hand.
- 2. Wrap the cable around the crossbar and thread it back down into the cable clamp.

All shapes and sizes now available, including: Batting Cage Nets, Backstops, Trapezoid Backstops, Outfield and Foul Ball Netting,

There are <u>3</u> Ways for you to get more information and FREE estimates on JUGS Custom Netting:

- 1. Call JUGS at 1-800-547-6843 and ask for a Net Specialist.
- 2. FAX your specifications to a Net Specialist at 503-691-1100.
- 3. E-mail your specifications to info@jugssports.com.

WARNING:

Do not leave your net and frame up during extreme weather conditions (high wind, snow), as non-warranty damage may occur.

JUGS Batting Cage Nets with #96 POLYESTER are guaranteed for two (2) years against defects in material or workmanship. All JUGS Batting Cage Frames are guaranteed for two (2) years unless damaged by snow, ice or other acts of God. Commercial use of JUGS Batting Cage Nets or JUGS Batting Cage Frames automatically limits this warranty to thirty (30) days after date of shipment

NOTE: Drawings are not to scale.

Middle Sections: Insert a short hanging-loop assembly into each of the middle pre-drilled crossbar

1. Lay your net out under the frame sections. Stretch it out completely from one end to the other.

2. Pick up the net by the nylon rope and attach it to the middle frame sections with the hanging-loop

Remember: For safety purposes, your net should be at least 2' away from all poles or hard surfaces. That way, none of the batted balls can bounce back and injure someone.

1. At each pre-drilled hole on the crossbar, hold the clamp and hanging-loop assembly with one hand and thread the cable through the pre-drilled

3. Slide the cable clamp up on the cable and tighten it, leaving one inch of cable hanging below. See Figure 2.

CUSTOM NETTING: FROM FACTORY TO YOU IN LESS THAN 2 WEEKS



