

PROTECTOR SERI

¹/₂-Inch

Socket Wrench

SOFTBALL SCREEN ASSEMBLY INSTRUCTIONS

Carriage

Bolts

Lock

Nuts



- **Carriage Bolts**
- (24)**Lock Nuts**
- 1/2-Inch Socket Wrench (1)
- (4) Legs
- **Frame Parts** (8)
- (12)**Padded Sections**
- **Softball Netting**



Start by attaching 4 legs (B) to both frame parts A using carriage bolts and lock nuts. (Lock nuts should be on underside of legs).

Note: all remaining carriage bolts should enter frame tubing from the outside, with lock nut on the inside.


Next, connect one leg assembly to part D,

and the other leg assembly to part C. Finger tight nuts and bolts.

Join both sides together. Finger tight nuts and bolts.

Finally, join parts E, C, D and E together and attach to already assembled base. Finger tight nuts and bolts.


SECURELY tighten all bolts using socket wrench.

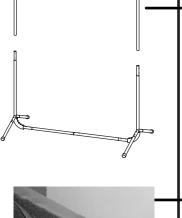

PADDING


Using PADDING illustration, attach all padded sections to locations shown. Note: Pad seams should all be on inside edge of frame.


NETTING

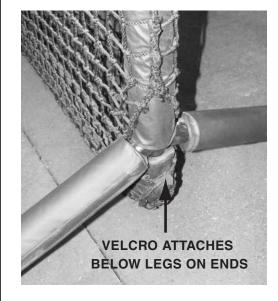


Stretch netting out, on the ground, in the same shape as the frame. Stand at the center of the frame and begin feeding the net onto the frame, like a pillowcase, alternating sides as you go. After the netting has been slipped over the frame, secure the netting around the bottom frame using the attached velcro strips.


Note: the side velcro strips attach below the legs (see photo above). Note: new netting must be pulled and stretched to fit frame correctlythis is easier with two people.

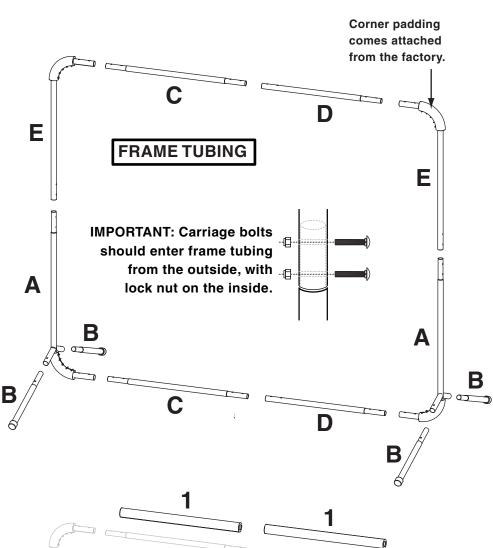

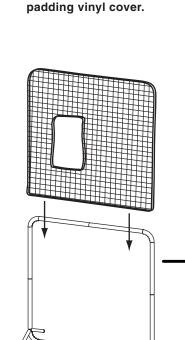

Padding reference numbers are located on the inside of the

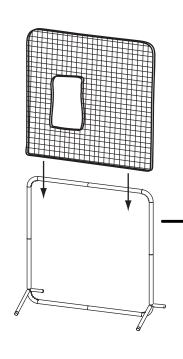

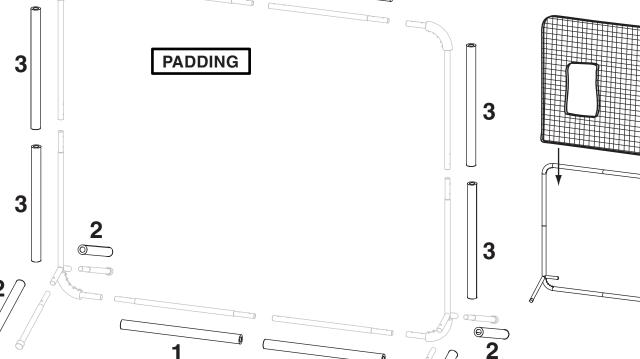

JUGS Sports guarantees JUGS Protector™ Series netting and frame for (2) years unless damaged by snow, ice or other acts of God.